



REMOTE CONTROL SIMPLICITY 1-4

Can be used as a four zone remote

Each zone can be set for single color, dual color, RGB led strip.




Technical Parameters

- Output signal: RF(2.4GHz)
- Working voltage : 3VDC(CR2032)
- Working current: < 5mA
- Standby current: < 10μA
- Standby time: 12 months
- Remote distance: 30m
- Working temperature: -30°C~55°C
- Dimension: L107×W58.5×H9mm
- Weight: 34g

Note: To extend battery life, the touch wheel will enter sleep mode after few seconds without operation. You need to press any key to activate the touch wheel again.

Dimension

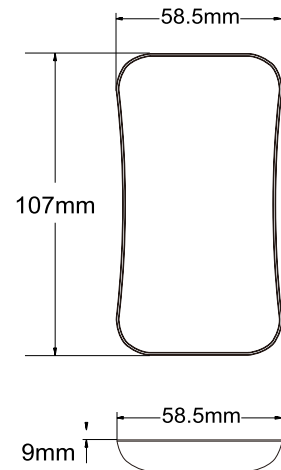

How to set the light type of each zone

Long press Zone 1 or 2 or 3 or 4 + until the red indicator flashes (Dimming function)

Long press Zone 1 or 2 or 3 or 4 + until the red indicator flashes (RGB function)


Long press Zone 1 or 2 or 3 or 4 + until the red indicator flashes (Dual color function)

Long press Zone 1 or 2 or 3 or 4 + until the red indicator flashes (Dual color function)

How to match the remote with Controller

Short press match key on the controller, within 5s press the zone number (1,2,3,4) you want to set the controller. In each zone you can set more than one controller.

Key Function

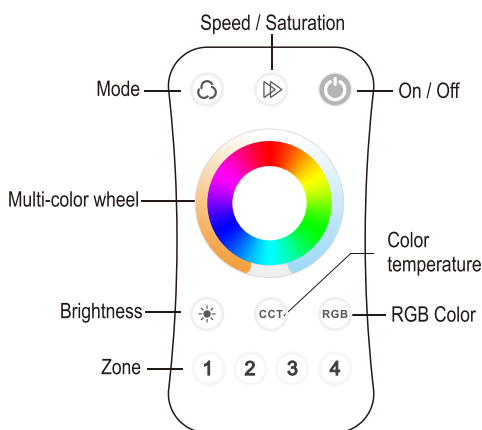

- On/Off:** Short press turn on/off all lights.
- Mode:** Switch dynamic RGB/RGBW mode, Short press runs the next mode, long press 2s runs mode cycle.
- Speed/Saturation:** For dynamic RGB/RGBW mode adjust mode speed, short press 10 levels, long press 2s the default speed. For static RGB color, adjust saturation, short press 11 levels, long press 1-5s continuous 256 levels adjustment.
- Brightness:** Adjust brightness, short press 11 levels, long press 2s gives max or min brightness, at the same time multi color wheel becomes brightness wheel. (single color, Dual color, RGB led strip).
- RGB:** Adjust static RGB color, short press gives 24 different static colors, at the same time multi color wheel becomes RGB color wheel. (RGB led strip only)
- CCT:** Adjust color temperature, Short press 11 levels, long press 2s gives max or min color temperature, at the same time multi color wheel become color temperature wheel. (Dual color led strip only)
- 1/2/3/4 Zone :** Short press turn on- select the zone(when on)you wish to control, long press >2s turn off the specific zone light.

Malfunctions & troubleshooting

Mulfuctions	Causes	Troubleshooting
No response of the remote	1. The battery has no power. 2. Beyond controllable distance. 3. The controller did not match the remote.	1. Replace battery. 2. Reduce remote distance. 3. Re-match the remote.